#### INSTRUCTION MANUAL

HI 96714

## Cyanide ISM

Dear Customer.

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for the correct use of the instrument. Please read it carefully before using the meter. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com.

#### Preliminary examination:

Please examine this product carefully. Make sure that the instrument is not damaged. If any damage occured during shipment, please notify your Dealer.

Each **HI 96714** Ion Selective Meter is supplied complete with:

 
- Two Sample Cuvettes and Caps
- 9V Battery
- Instruction Manual

<u>Note</u>: Save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in its original ancking

## For more details about spare parts and accessories

Technical specifications:	
Range	0.000 to 0.200 mg/L
Resolution	0.001 mg/L
Accuracy	$\pm$ 0.005 mg/L $\pm$ 3% of reading @ 25°C
Typical EMC Dev.	±0.001 mg/L
Light Source	Tungsten Lamp
Light Detector	Silicon Photocell with narrow band interference filter @ 610 nm
Method	Adaptation of the Standard Methods fo the Examination of Water and Wastewater 18th edition, Pyridine-Pyrazalone method The reaction between cyanide and reagent causes a blue tint in the sample.
Environment	0 to 50°C (32 to 122°F); max 95% RH non-condensing
Battery Type	1 x 9 volt
Auto-Shut off	After 10' of non-use in measurement mode after 1 hour of non-use in calibration mode with last reading reminder.
Dimensions	192 x 104 x 69 mm (7.6 x 4.1 x 2.7 ")
Weight	360 g (12.7 oz.).

#### Functional description:



- GLP/A key: press to enter GLP mode. In calibration mode press to edit the date and time.
- CAL CHECK key: press to perform the validation of the meter, or press and hold for three seconds to enter calibration mode.
- ZERO/CFM key: press to zero the meter prior to measurement, to confirm edited values or to confirm factory calibration restore.
- 4. READ/►/TIMER key: In measurement mode, press to make a measurement, or press and hold for three seconds to start a pre-programmed countdown prior to measurement. In GLP mode press to view the next screen.
- 5. ON/OFF key: to turn the meter on and off.
- 6. Liquid Crystal Display (LCD)
- 7. Cuvette alignment indicator
- 8. Cuvette holder

#### DISPLAY ELEMENTS DESCRIPTION:



- The measuring scheme (lamp, cuvette, detector), appears during different phases of zero or reading measurement
- 2. Error messages and warnings
- 3. The battery icon indicates the charge state of the battery
- 4. The hourglass appears when an internal check is in progress
- 5. Status messages
- 6. The chronometer appears when the reaction timer is running
- 7. The month, day and date icons appear when a date is displayed
- 8. Four digit main display
- 9. Measuring units
- 10. Four digit secondary display

#### **Errors and warnings:**

#### ON ZERO READING:



**Light High:** There is too much light to perform a measurement. Please check the preparation of the zero cuvette.



**Light Low:** There is not enough light to perform a measurement. Please check the preparation of the zero cuvette.



No Light: The instrument cannot adjust the light level. Please check that the sample does not contain any debris.

#### ON SAMPLE READING:



Inverted cuvettes: The sample and the zero cuvette are inverted.



Zero: A zero reading was not taken. Follow the instructions of the measurement procedure for zeroing the meter.



Under range: A blinking "0.000" indicates that the sample absorbs less light than the zero reference. Check the procedure and make sure you use the same cuvette for reference (zero) and measurement.



Over Range: A flashing value of the maximum concentration indicates on over range condition. The concentration of the sample is beyond the programmed range: dilute the sample and re-run the test.

#### DURING CALIBRATION PROCEDURE:



 ${\bf Standard\ Low:}$  The standard reading is less than expected.



**Standard High:** The standard reading is higher than expected.

#### OTHER ERRORS AND WARNINGS:



Cap error: Appears when external light enters in the analysis cell. Assure that the cuvette cap is present.



Cooling lamp: The instrument waits for the lamp to cool down.



Battery low: The battery must be replaced soon.



Dead battery: This indicates that the battery is dead and must be replaced. Once this indication is displayed, normal operation of the instrument will be interrupted. Change the battery and restart the meter.

#### Measurement procedure:

## Measurement ▼



6

7

8

9

- 0.0 -

 
6

03714A


2. When the beeper sounds briefly and the LCD displays dashes, the meter is ready. The blinking "ZERO" indicates that the instrument needs to be zeroed first.

Note: Temperature is a very important narmeter.

1. Turn the meter on by pressing ON/OFF.



 3• Fill a cuvette up to the 10 mL mark with unreacted sample and replace the cap.



5• Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display, depending on the measurement phase.

6• After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for measurement. Remove the cuvette.

7 • Add 1 level spoon of HI 93714A Cyanide Reagent. Remember to close the reagent bottle immediately after use.

Note: Pay attention to the way the spoon is filled: - do not overfill it;

- do not press the powder.



8• Replace the cap immediately to prevent the escape of chlorine gas which is developed during the reaction, and shake gently for 30 seconds.

9• Wait for 30 seconds and add the content of one packet of HI 93714B-0 reagent. Replace the cap and shake gently for 10 coords.

 
10 • Immediately add the content of one packet of HI 93714C-0 reagent, replace the cap and shake vigorously for 20 seconds.

11 • Replace the cuvette into the holder and ensure that the notch on the cap is positioned securely into the groove.



sale@ponpe.com www.ponpe.com

12 • Press and hold READ/►/TIMER for three seconds and the display will show the countdown prior to measurement or alternatively wait for 25 minutes and press READ/►/TIMER An audible "been' indicates the end of countdown period. In all cases the lamp cuvette and detector icons will appear on the display, depending on the measurement phase



13 • At the end of measurement, the instrument directly displays concentration in ma/L of cvanide on the LCD. To convert the reading to ma/L of Potassium Cvanide (KCN). multiply by the factor of 2.5.



Validation **▼** 

- 0.0 -

#### INTERFERENCES:

Interference may be caused by large amounts of turbidity that will cause high readings.

Oxidizing (like chlorine) or reducing agents (such as sulfide or sulfur dioxide) are known to interfere with the measurement. Distillation will remove these

Samples with high pH values should be adjusted to approximately nH 7 hefore testing

CAUTION: Cvanide, its solution and hydrogen cvanide liberated by acids are very poisonous.

#### Validation and Calibration procedures

Warning: do not validate or calibrate the instrument with standard solutions other than the Hanna CAL CHECK™ Standards, otherwise erroneous results will be obtained.

For accurate validation and calibration results, please perform tests at room temperature (18 to 25°C; 64.5 to 77.0°F).



[i] Use the Hanna CAL CHECK™ cuvettes (see "Accessories") to validate or calibrate instruments.

#### VALIDATION

- 1 Turn the meter on by pressing ON/OFF.
- 2. When the beeper sounds briefly and the LCD displays dashes, the meter is ready.
- 3. Place the CAL CHECK™ Standard HI 96714-11 Cuvette A into the holder and ensure that the notch on the cap 4-5 is positioned securely into the groove.
- 4. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.
- 5. After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for validation
- 6. Remove the cuvette

7. Place the CAL CHECK™ Standard HI 96714-11 Cuvette B into the holder and ensure that the notch on the cap is 24.59 positioned securely into the groove

8. Press CAL CHECK key and the lamp, cuvette and detector icons together with "CAL CHECK" will appear on the display. depending on the measurement phase.

9. At the end of the measurement the display will show the validation standard value. The reading should be within specifications as reported on the CAL CHECK™ Standard Certificate. If the value is found out of specifications please check that the cuvettes are free of fingerprints, oil or dirt and repeat validation. If results are still found out of specifications then recalibrate the instrument.

#### CALIBRATION

Note: It is possible to interrupt the calibration procedure at any time by pressing CAL CHECK or ON/OFF keys

- 1 Turn the meter on by pressing ON/OFF. 2. When the beener sounds briefly and the
- LCD displays dashes, the meter is ready, 3. Press and hold CAL CHECK for three seconds to enter calibration mode. The display will show "CAL" during calibration procedure. The blinking "ZERO" asks for instrument zeroing.
- 4. Place the CAL CHECK™ Standard HI 96714-11 Cuvette A into the cuvette holder and ensure that the notch on the cap is positioned securely into the groove.
- 5. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.
- 6. After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for calibration. The blinking "READ" asks for reading calibration standard.
- 7. Remove the cuvette.
- 8. Place the CAL CHECK™ Standard HI 96714-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.
- 9. Press READ/►/TIMER and the lamp. cuvette and detector icons will appear on the display, depending on the measurement phase.
- 10 The instrument will show for three seconds the CAL CHECK™ standard value
- Note: If the display shows "STD HIGH", the standard value was too high. If the display shows "STD LOW", the standard

value was too low. Verify that both CAL CHECK™ Standard HI 96714-11 Cuvettes, A and B are free from fingerprints or dirt and that they are inserted cor-

Ö. 10 1.

Calibration **▼** 

0.100...

- 11 Then the date of last calibration (e.g.: "01.08.2009") appears on the display, or "01.01.2009" if the factory calibration was selected before. In both cases the year number is blinking ready for date input.
- 12 Press GLP/▲ to edit the desired year (2009-2099). If the key is kept pressed, the year number is automatically increased. 13 • When the correct year has been set press
- ZERO/CFM or READ/ /TIMER to confirm. Now the display will show the month 14-15 hlinking
- 14 Press GLP/▲ to edit the desired month (01-12). If the key is kept pressed, the month number is automatically increased.
- 15. When the correct month has been set. press ZERO/CFM or READ/>/TIMER to confirm. Now the display will show the day blinking.
- 16 Press GLP/▲ to edit the desired day (01-31). If the key is kept pressed, the day number is automatically increased.
- Note: It is possible to change the editing from day to year and to month by pressing READ/►/TIMER.
- 17 Press ZERO/CFM to save the calibration
- 18 The instrument displays "Stor" for one second and the calibration is saved 19. The instrument will return automatically
- to measurement mode by displaying dashes on the ICD

In GLP mode, the last calibration date can be verified and the factory

1 • Press GLP/▲ to enter GLP mode. The secondary display.















# Stor

#### LAST CALIBRATION DATE

calibration month and day will appear on the main display and the year on the

2. If no calibration was performed, the factory calibration message. "F.CAL" will appear on the main display and the instrument returns to measurement made after three sernnds

# Calibration Date w





# F.C.ÄL

### FACTORY CALIBRATION RESTORE

It is possible to delete the calibration and restore factory calibration.

- 1 Press GLP/▲ to enter GLP mode.
- 2. Press READ/>/TIMER to enter in the factory calibration restore screen. The instrument asks for confirmation of user calibration delete
- 3. Press ZERO/CFM to restore the factory calibration or press GLP/A again to abort factory calibration restore.
- 4. The instrument briefly indicates "donE" upon restoration of factory calibration prior returning to measurement mode



0.480.

CAL

Factory

 
Restore w

READ TIMER

## **Battery management**

To save the battery, the instrument shuts down after 10 minutes of non-use in measurement made and after 1 hour of non-use in calibration made If a valid measurement was displayed before

auto-shut off, the value is displayed when the instrument is switched on. The blinking "ZERO" means that a new zero has to be performed.



The remaining battery capacity is evaluated at the instrument startup and after each measurement.

The instrument displays a battery indicator with three levels as follows:

- 3 lines for 100 % capacity
- 2 lines for 66 % capacity

light level

• 1 line for 33 % capacity

. Battery icon blinking if the capacity is under 10 %. If the battery is empty and accurate measurements can't be taken any more, the instrument shows "dEAd bAtt" and turns off.

To restart the instrument, the battery must be replaced with a fresh one. To replace the instrument's battery, follow the steps:

- . Turn the instrument off by pressing ON/OFF.
- . Turn the instrument upside down and remove the battery cover by turning it counterclockwise.



- · Extract the battery from its location and replace it with a fresh one.
- . Insert back the battery cover and turn it clockwise to close.

### Accessories:

REAGENT SETS

HI 93714-01 Reagents for 100 tests HI 93714-03 Reggents for 300 tests

OTHER ACCESSORIES

HI 96714-11 CAL CHECK™ Standard Cuvettes (1 set)

HI 721310 9V battery (10 pcs)

HI 731318 Cloth for wiping cuvettes (4 pcs) HI 731331 Glass cuvettes (4 pcs) HI 731335 Cons for cuvettes (4 pcs)

HI 93703-50 Cuvette cleaning solution (230 ml).

#### Warrantv

HI 96714 is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained according

This warranty is limited to repair or replacement free of charge. Damages due to accident, misuse, tampering or lack of prescribed

maintenance are not covered. If service is required contact your dealer. If under warranty report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified

of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service Department and then send it with shinment costs prepaid. When shinning any instrument, make sure it is properly packaged for complete protection.

To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase.

#### dations for Users

Refere using those products, make sure that they are entirely suitable for your specific application and for

Operation of these instruments may cause unacceptable interferences to other electronic equipments, this requiring the gnemtor to take all necessary steps to correct interference

Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC To avoid damages or burns, do not out the instrument in microwave oven. For yours and the instrument

Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.

For additional information, contact your dealer or the nearest

Hanna Customer Service Center. To find the Hanna Office in your area. visit our web site

www.hannainst.com



sale@ponpe.com www.ponpe.com