INSTRUCTION MANUAL

HI 96735

Hardness ISM

Dear Customer

Thank you for choosing a Hanna Instruments product.

Please read this instruction manual carefully before using the meter.

This manual will provide you with the necessary information for correct use of the instrument. If you need additional technical information do not hesitate to e-mail us at tech@hannainst.com or view our worldwide contact list at www hannainst com

Preliminary examination:

Please examine this product carefully. Make sure that the instrument is not damaged. If any damage occured during shipment, please notify your Dealer.

Each HI 96735 Ion Selective Meter is supplied complete with:

- Two Sample Cuvettes and Caps
- 9V Battery
- Instruction Manual


Note: Save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in its original packina.



 $oldsymbol{i}$ For more details about spare parts and accessories see "Accessories".

Technical specifications:	
Range	LR 0 to 250 mg/L MR 200 to 500 mg/L
	HR 400 to 750 mg/L
Resolution	1 mg/L from 0 to 100 mg/L 5 mg/L from 100 to 750 mg/L
Accuracy	LR ± 5 mg/L ± 4 % of reading@ 25°C MR ± 7 mg/L ± 3 % of reading@ 25°C HR ± 10 mg/L ± 2 % of reading@ 25°C
Light Source	Light Emitting Diode
Light Detector	Silicon Photocell with narow band interference filter @ 466 nm
Method	Adaptation of the EPA recommended method 130.1. The reaction between calcium, magnezium and the reagents causes a red-violet tint in the sample.
Environment	0 to 50 °C (32 to 122 °F); max 95% RH non-condensing
Battery Type	1 x 9 volt
Auto-Shut off	After 10' of non-use in measurement mode; after 1 hour of non-use in calibration mode; with last reading reminder.
Dimensions	192 x 104 x 69 mm (7.6 x 4.1 x 2.7")
Weight	320 g (11.3 oz.).

Functional description:

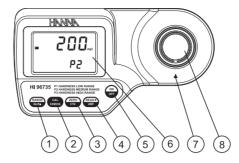

- 1. RANGE/GLP/ key: press to change the range or press and hold for three seconds to enter GIP mode. In calibration mode press to edit the date and time
- 2. CAL CHECK key: press to perform the validation of the meter, or press and hold for three seconds to enter calibration mode.
- 3. **ZERO/CFM** kev: press to zero the meter prior to measurement, to confirm edited values or to confirm factory calibration restore. Press and hold for three seconds to start a preprogramed countdown prior to measurement.
- 4. READ/►/UNIT kev: In measurement mode, press to make a measurement, or press and hold for three seconds to change the measurement unit. In GLP mode press to view the next screen.
- 5. ON/OFF kev: to turn the meter on and off.
- 6. Liquid Crystal Display (LCD)
- 7. Cuvette alignment indicator
- 8. Cuvette holder

DISPLAY ELEMENTS DESCRIPTION:



- 1. The measuring scheme (lamp, cuvette, detector), appears during different phases of zero or reading measurement
- 2. Error messages and warnings
- 3. The battery icon indicates the charge state of the battery
- 4. The hourglass appears when an internal check is in progress
- 5. Status messages
- 6. The chronometer appears when the reaction timer is running
- 7. The month, day and date icons appear when a date is displayed
- 8. Four digit main display
- 9. Measuring units
- 10. Four digit secondary display

Errors and warnings:

ON ZERO READING:



Light High: There is too much light to perform a measurement. Please check the preparation of the zero cuvette.



Light Low: There is not enough light to perform a measurement. Please check the preparation of the zero cuvette.



No Light: The instrument cannot adjust the liaht level. Please check that the sample does not contain any debris.

ON SAMPLE READING:



Inverted Cuvettes: The sample and the zero cuvette are inverted.



Zero: A zero reading was not taken. Follow the instructions of the measurement procedure for zeroina the meter.



Under Range: A blinking "200" indicates that the sample absorbs less light than the zero reference. Check the procedure and make sure vou use the same cuvette for reference (zero) and measurement



Over Range: A flashing value of the maximum concentration indicates an over range condition. The concentration of the sample is beyond the programmed range: dilute the sample and re-run the test.

DURING CALIBRATION PROCEDURE



Standard Low: The standard reading is less than expected.



Standard High: The standard reading is higher than expected.

OTHER ERRORS AND WARNINGS:



Cap Error: Appears when external light enters in the analysis cell. Assure that the cuvette cap is present.



Cooling lamp: The instrument waits for the lamp to cool down.



Battery Low: The battery must be replaced



b8EE

Dead Battery: This indicates that the battery is dead and must be replaced. Once this indication is displayed, normal operation of the instrument will be interrupted. Change the hattery and restart the meter

Measurement procedure:

Measurement ▼

P2

2

3

4

 
5

8

ZERO

- [],[] -

P2





3. Add 0.5 mL of unreacted sample to the cuvette. Add 0.5 ml of HI 93735IND-0 indicator reagent. With the plastic dropper fill the cuvette up to the 10 mL mark addina HI 93735A-XR (X=L, M, H) reagent appropriate to the selected range.

4. Add two drops of HI 93735B-0 buffer reagent. Replace the cap and invert 5 times to mix.

5 • Place the cuvette into the cuvette holder and ensure that the notch on the cap is positioned securely into the groove.



7• After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for measurement. Remove the cuvette.



9 • Replace the cuvette into the holder and ensure that the notch on the cap is positioned securely into the groove.

10 • Press **READ/**►/**UNIT**. In all cases the lamp. cuvette and detector icons will appear on the display, depending on the measurement phase.



HANNA instruments

 
11 • At the end of measurement, the instrument directly displays the hardness in the last unit selected on the LCD. Press the **READ/**►/**UNIT** key repeatedly to change the reading unit: mg/L, °f, °D and °E respectively. The conversion factors are as follows.

 $1 \text{ mg/L} = 0.1 \text{ }^{\circ}\text{f} = 0.0556 \text{ }^{\circ}\text{D} = 0.07 \text{ }^{\circ}\text{E}$

INTERFERENCES:

Interference may be caused by excessive amounts of heavy metals.

Note: If the sample is very acidic, some extra drops of HI 93735B-0 buffer reagent may be added




will show the validation standard value. The reading should be within specifications as reported on the CAL CHECK™ Standard 9 Certificate. If the value is found out of specifications, please check that the cuvettes are free of fingerprints, oil or dirt and repeat validation. If results are still found out of specifications then recalibrate the instrument.


CALIBRATION

Note: It is possible to interrupt the calibration procedure at any time by pressing CAL CHECK or ON/OFF keys.

- 1 Turn the meter on by pressing ON/OFF.
- 2. When the beeper sounds briefly and the LCD displays dashes, the meter is ready.
- 3. Press and hold CAL CHECK for three seconds to enter calibration mode. The display will show "CAL" during calibration procedure. The blinking "ZERO" asks for instrument zeroina.
- **4•** Place the CAL CHECK™ Standard HI 96735-11 Cuvette A into the cuvette holder and ensure that the notch on the cap is positioned securely into the groove.
- 5. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.
- **6** After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for calibration. The blinking "READ" asks for reading calibration standard.
- **7•** Remove the cuvette.
- 8. Place the CAL CHECK™ Standard HI 96735-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.
- 9 Press READ/►/UNIT and the lamp, cuvette and detector icons will appear on the display, depending on the measurement phase.
- **10** The instrument will show for three seconds the CAL CHECK™ standard value.

  Note: If the display shows "STD HIGH", the standard value was too high. If the display shows "STD LOW", the standard value was too low. Verify that both CAL CHECK™ Standard HI 96735-11 Cuvettes. A and B are free from fingerprints or dirt and that they are inserted correctly.





- 13 When the correct year has been set, press **7FRO/CFM** or **RFAD/**▶**/UNIT** to confirm. Now the display will show the month blinking.
- 14 Press RANGE/GLP/▲ to edit the desired month (01-12). If the key is kept pressed. the month number is automatically increased.
- **15** When the correct month has been set, press ZERO/CFM or READ/►/UNIT to confirm. Now the display will show the day blinking.
- 16 Press RANGE/GLP/▲ to edit the desired day (01-31). If the key is kept pressed. the day number is automatically increased.
- Note: It is possible to change the editing from day to year and to month by pressing RFAD/►/UNIT.
- 18 The instrument displays "Stor" for one

17 • Press ZERO/CFM to save the calibration

- second and the calibration is saved.
- 19 The instrument will return automatically to *measurement mode* by displaying dashes on the ICD.



Stor

65

0 108

RANGE GLPA

ZERO OF READ UNIT

0 (68

ZERO OF READ UNIT

14-15

2009

RANGE

09.08

2009

RANGE GLPA

_20054



RANGE



F.C.AL 65

FACTORY CALIBRATION RESTORE

It is possible to delete the calibration and restore factory calibration.

- 1 Press RANGE/GLP/▲ to enter GIP mode.
- 2 Press READ/►/UNIT to enter in the factory calibration restore screen. The instrument asks for confirmation of user calibration
- **3** Press **7FRO/CFM** to restore the factory calibration or press RANGE/GLP/A again to abort factory calibration restore.
- 4. The instrument briefly indicates "donE" upon restoration of factory calibration prior returning to *measurement mode*.

If a valid measurement was displayed before

auto-shut off, the value is displayed when the

instrument is switched on. The blinking "ZERO"

means that a new zero has to be performed.

and after each measurement

• 3 lines for 100 % capacity

• 2 lines for 66 % capacity

• 1 line for 33 % capacity

turning it counterclockwise.

Battery management

mode

Factory Calibration Restore w







29

200.

P2

To save the battery, the instrument shuts down after 10 minutes of non-

use in measurement mode and after 1 hour of non-use in calibration

One fresh battery lasts for arround 750 measurements, depending on the

The remaining battery capacity is evaluated at the instrument startup

The instrument displays a battery indicator with three levels as follows:

If the battery is empty and accurate measurements can't be taken any

To restart the instrument, the battery must be replaced with a fresh one

• Turn the instrument upside down and remove the battery cover by

Battery icon blinking if the capacity is under 10 %.

more the instrument shows "dFAd bAtt" and turns off.

To replace the instrument's battery, follow the steps:

• Turn the instrument off by pressing ON/OFF.

HI 93703-50 Warrantv

Accessories:

REAGENT SETS

HI 93735-00

HI 93735-01

HI 93735-02

HI 93735-0

HI 96735-11

HI 740029P

HI 731318

HI 731331

HI 731335

OTHER ACCESSORIES

HI 96735 is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained according to the instructions.

Reagents for 100 tests (LR. 0 to 250 mg/L)

Reagents for 100 tests (MR. 200 to 500 mg/L)

Reagents for 100 tests (HR. 400 to 750 mg/L)

(AL CHECK™ Standard Cuvettes (1 set)

Cloth for wiping cuvettes (4 pcs.)

Cuvette cleaning solution (230 mL).

HR - 100 tests)

9V battery (10 pcs.)

Glass cuvettes (4 pcs.)

Caps for cuvettes (4 pcs.)

Reggents for 300 tests (LR - 100 tests, MR - 100 tests,

This warranty is limited to repair or replacement free of charge.

Damages due to accident, misuse, tampering or lack of prescribed

If service is required, contact your dealer, If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred.

If the instrument is to be returned to Hanna Instruments first obtain a Returned Goods Authorization Number from the Customer Service Department and then send it with shipment costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase.

Recommendations for Users

Before using these products, make sure that they are entirely suitable for your specific application and for the environment in which they are used.

Operation of these instruments may cause unacceptable interferences to other electronic equipment, this requiring the operator to take all necessary steps to correct interferences.

Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC

To avoid damages or burns, do not put the instrument in microwave oven. For yours and the instrument safety do not use or store the instrument in hazardous environments.

Hanna Instruments reserves the right to modify the design, construction, or appearance of its products without advance notice.

> For additional information, contact your dealer or the nearest

Hanna Customer Service Center. To find the Hanna Office in your area. visit our web site

www.hannainst.com



1 • Turn the meter on by pressing ON/OFF.

2. When the beeper sounds briefly and the

3• Place the CAL CHECK™ Standard HI 96735-11 Cuvette A into the holder and ensure that the notch on the cap is positioned securely into the groove.



5• After a few seconds the display will show ready for validation.

7. Place the CAL CHECK™ Standard HI 96735-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.



350.

350

1945

P2

29

۶۶

 


 
Warning: do not validate or calibrate the instrument with standard solutions other than the Hanna CAL CHECK™ Standards, otherwise erroneous results will be obtained

 
For accurate validation and calibration results, please perform tests at room temperature (18 to 25°C; 64.5 to 77.0°F).

 


VALIDATION















Validation **▼**





 

 








Calibration ▼







 











GLP

In GLP mode, the last calibration date can be verified and the factory calibration can be restored.

LAST CALIBRATION DATE



2. If no calibration was performed, the factory calibration message, "F.CAL" will appear on the main display and the instrument returns to measurement mode after three seconds.







• Insert back the battery cover and turn it clockwise to close.



sale@ponpe.com

www.ponpe.com